


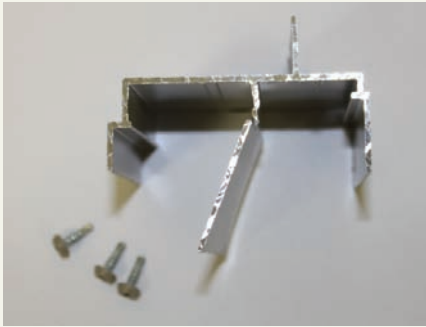

Transom Mulling Instructions

- 1 Lay units on stable, flat surface.
- 2 Remove head nail fin from window (scribe with sharp utility knife, bend back and forth).
- 3 Remove nail fin from sill of transom (scribe along pre-scribed line, bend back and forth).



- 4 Place transom over head jamb with the larger flat surface to the exterior and smaller stepped surface to the interior.



- 5 Screw through the overlap, attaching both windows on exterior and interior with self tapping screws.



- 6 Fill ends with backer rod and silicone caulk to prevent moisture penetration.

